




FREELIGHT T2 UNDERCABINET LIGHTING



**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION
LEAVE A COPY FOR THE USER / MAINTENANCE ENGINEER FOR FUTURE REFERENCE**

IMPORTANT INSTALLATION INFORMATION

- Installation should be carried out in accordance with the latest edition of the I.E.E. Wiring Regulations (BS7671). If in doubt, consult a qualified electrician.
- Mains Voltage – 240V AC.
- Use only with T2 Compact fluorescent lamps or T2 LED lamps.
- Ensure that ALL electrical connections are tight with no loose strands.
- These luminaires are for indoor use only.
- Ensure there is adequate free air circulation of at least 50mm around the luminaire. All luminaires run hot. It is the installer's responsibility to consider fire risk and take appropriate precautions.
- Before commencing installation or maintenance, ensure electricity is switched off at the mains.
- The nearest illuminated surface must be at least 0.3m from the front of the luminaire.
-  This luminaire is suitable to be mounted on a Normally Flammable Surface e.g. a wooden ceiling or a material based on wood.

IMPORTANT USER INFORMATION

- Always switch off mains supply before servicing, fitting or changing the lamp.
- Replace failed lamps immediately. Allow the lamp and fitting to cool before replacing lamp.
- Check that the correct lamp type and wattage is fitted (T2 Compact fluorescent lamp Max. 7-Watts).


INSTALLATION INSTRUCTIONS

1. Select required position for the luminaire. Beware of water pipes & electric cables when drilling fixing holes.
2. Connect the luminaire to the main supply via an approved junction box (not supplied) as follows:
 - Blue – Neutral
 - Brown - Live

This fitting is double insulated, no earth connection is required. Ensure that the fitting does not come into contact with any earthed metal. The “looping-in” of the fixed wiring supply should be maintained. See Fig. 1.

3. Fit the lamp into the lampholder, insert and twist clockwise to lock into position.
4. Switch on the power supply.

If your luminaire is not at the end of a wiring spur, then there will be an extra pair of wires together (looping-in wires) in the supply wiring which could be coloured black or red. These should be connected together using a fourth approved terminal block as shown. If in doubt consult a qualified electrician

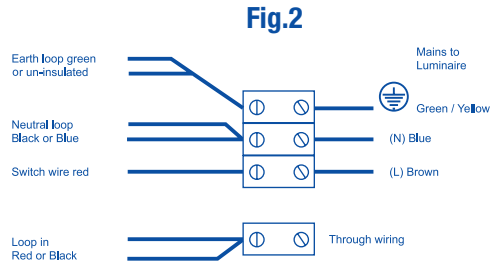

GENERAL

- Aurora T2 Compact fluorescent lamps have an integral electronic ballast and are a low temperature and energy efficient alternative to incandescent and halogen lighting.
- Integral on/off switch on AU-KLP102 only.
- Aurora Freelight undercabinet lights are to be connected to a 240V mains supply.
- This luminaire is not dimmable.

GUARANTEE

This product is guaranteed in the UK for a period of 1 year from the date of purchase. The guarantee is invalid in the case of improper use, installation, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671). Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. Aurora does not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. Aurora reserves the right to alter specifications without prior notice.